

SMS

To send invitations via SMS and receive system notifications on your mobile phone, enter the login credentials of your **Every8D.com** account.



The settings for this service are hidden unless you select 繁體中文 (Traditional Chinese) as the language for your web interface. To change the language, see [Applications > System Appearance](#).



This service is available only in Taiwan.

SMS - □ ×

←

SMS Server Setup (For cellphones used in Taiwan only.)

Register <http://www.every8d.com>

Username

Password

System Notification

Phone Number

Send a Test SMS

Field	Description
Register	Link to the Every8D website.
Username	Enter the username for your Every8D account.
Password	Enter the password for your Every8D account.

Field	Description
System Notification	Enable this option if you want to receive a message from the network drive when; <ul style="list-style-type: none">• Hard disk is full (used over 95%).• Hard disk temperature is high (over 75°C).• Hard disk related errors.
Phone Number	Enter the phone number where you want to receive the system notification.
Send a Test SMS	Click Send to send a test message to your mobile phone in order to confirm that the service works.

From:
<http://wiki.myakitio.com/> - **MyAkitio Wiki**

Permanent link:
http://wiki.myakitio.com/preferences_sms

Last update: **2012/12/21 12:48**

